


SECTION CONTROL SETTINGS

1



> Select 'Section Control' within the Applications tab

2

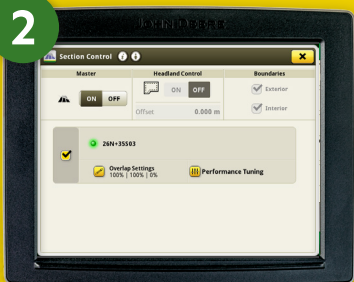


> Select the 'Pencil' next to overlap settings

3



> Adjust the three overlap settings as desired.
> Select 'Save'

4

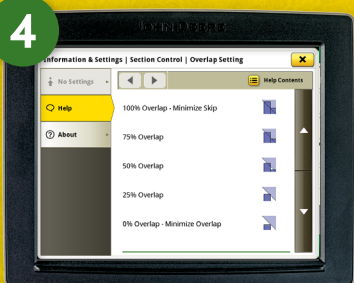

Overlap Settings Overview

USEFUL CONTACTS

Precision Ag



Lawrence Matthews
Group Precision Ag Manager
07787 890 356
lawrencematthews@huntforest.com



Tom Windel
Precision Ag Support Specialist & Demonstrator
07498 228 079
tomwindel@huntforest.com



Ben Gregory
Precision Ag Support & Demonstrator
07970 789 988
bengregory@huntforest.com



Josh Fulton
Precision Ag Support & Demonstrator
07393 765 206
joshfulton@huntforest.com



Dave Wills
Precision Ag Support Specialist
07393 765 271
davewills@huntforest.com



Matt Ranson
Precision Ag Support Specialist
07983 364 116
mattranson@huntforest.com



Precision Ag

QUICK REFERENCE GUIDE

GS4 Section Control



SECTION CONTROL SETUP



1
 > Run Screen
 > Select 'Select Home'



2
 > Select 'Fertiliser Settings'



3
 > Enter the details of the product on Page 1



4
 > Enter the distance factor on Page 3*



5
 > Select 'Calculate Optipoint' on Page 4



6
 > Enter desired speed to enter and exit the headlands
 > Select 'Ok'



7
 > Select 'Accept Values'



8
 > Make a note of the 'Distance' and the 'Delay On, Delay Off' times



9
 > Go to Equipment Manager and enter the 'Distance' and 'On/Off' times in the relevant box
 > Select 'Save'



10
 Section Control setup is complete

*The distance factor is found on KUHN's SpreadSet App.

This can be downloaded from the Apple App Store and Google Play

